Digital Keypads (IP65-Rated)

1 Master Code and 50 User Codes

User Manual

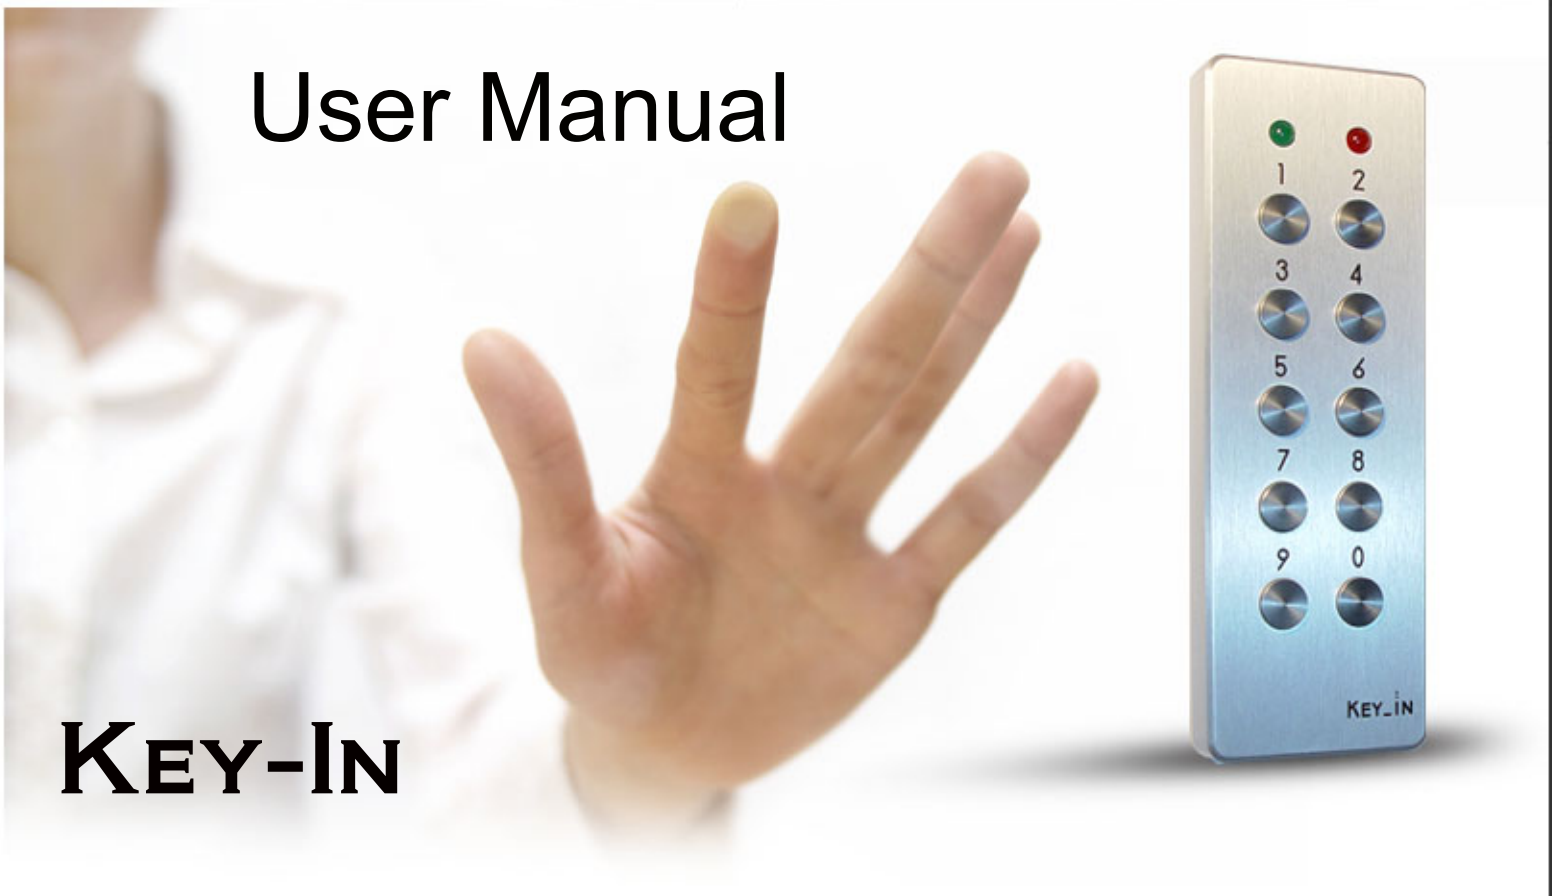

KEY-IN

Master Code - The code used for programming the user codes and any changes to the default settings of the keypad.

User Code - The access code given to an individual user that will allow entry to the building but does not allow the user to change any of the codes or default settings.

Duration of Door Unlocked Mode - The period of time that can be set between 01 and 99 seconds for which the electrical locking hardware can be unlocked to allow entry to the building.

Duration of Door Latched Mode - The period of time that can be set between 01 and 99 minutes for which the electrical locking hardware can be held in the unlocked position. This feature is activated by entering the user code followed by 0 and is useful on occasions such as deliveries.

Operating Mode - Once the user code has been entered the unit will switch for the duration of the Door Unlocked Setting to allow entry to the building and the green LED will flash at a rate of one per second. An incorrect code will result in the red LED flashing once and the unit will return to standby.

Standby Mode - The mode in which the keypad is not in use and the function to which it returns after it has completed an operation, or if an operation is not concluded.

Duration of the Exit Button Override Mode - The period of time that can be set between 01 and 99 seconds for which the electrical locking hardware can be unlocked to allow exit from the building.

1. Factory Default Settings

The Master Default Code is a 5 Digit number and is factory set at 12345.

The duration of Door Unlocked Mode to unlock the electrical locking hardware is factory set at 10 seconds.

The duration of Door Latched Mode to unlock the electrical locking hardware is factory set at 10 minutes.

The Exit Button Time Delay to unlock the electrical locking hardware is factory set at 10 seconds.

The duration the Exit Button Override Mode is factory set at 10 seconds.

2. Resetting the Master Code to either 4 or 5 Digits

This function only needs to be carried out if the master code is to be changed to a 4 digit code or having set a 4 digit code a change back to a 5 digit code is required. Note that using this function will erase the memory of the keypad and will therefore delete all of the User Codes from 01-50. If this function is to be carried out after initial programming, the existing User Codes should be recorded before hand.

Disconnect the power to the keypad.

Press either button 4 or 5 (depending on whether a 4 or 5 digit code is required and keep it pressed).

Apply power to the keypad and wait until the green LED is lit before releasing the button.

The red LED should now be lit.

Enter the first digit of the new master code and keep it pressed until the red LED is not lit and then release.

Enter the remaining digits of the new master code, the red LED should not be lit when each digit is pressed until the full code has been entered where it will light for approximately 3 seconds followed by the green LED flashing in standby.

Write Down the Master Code.

3. To change the Master Code

Enter the default or old master code and wait for the LED to come on.

Enter the default or old master code for a second time and wait for the green LED to come on.

Press keys 00 and wait for the red LED.

Enter the new master code and the green LED will flash in standby.

Write down the new master code and keep it in a safe place. Do not use the master code as a user code.

The green LED will flash in standby.

4. To Create/Change the user code

Enter the 4 or 5 digit master code and wait for the red LED to come on.

Enter the master code for a second time and wait for the green LED to come on.

Press any two keys i.e. 01 to 50 to store the user code Position Number and wait for the red LED to come on.

Enter the new User Code, which must consist of 4 digits for a 4 digit master code and 5 digits for a 5 digit master code. Regardless of the number of digits, do not use the master code as a user code. Do not use the same User Code for other User Code Position Numbers.

Write down the new 2 digit User Code Position Number and the new 4 or 5 digit User Code Number.

5. Changing the Delay for the Back to Standby Mode

Enter the Master Code and wait for the red LED to come on.

Enter the Master Code for a second time and wait for the green LED to come on.

Enter the code 66 and the green LED should be lit.

Press any two keys from 01 to 99 for the new time delay (01 being 1 second and 99 being 99 seconds).

The green LED will then flash in standby.

6. To Change the Duration of Door Latched Mode

Enter the Master Code and wait for the red LED to come on.

Enter the Master Code for a second time and wait for the green LED to come on.

Press keys 71, and the green LED will light.

Press any two keys from 01 to 99 for the new time delay in minutes (01 being 1 minute and 99 being 99 seconds).

The green LED will then flash in standby mode.

7. To Change the Duration of Door Unlocked Mode

Enter the Master Code and wait for the red LED to come on.

Enter the Master Code for a second time and wait for the green LED to come on.

Press keys 77, and the green LED will light.

Press any two keys from 01 to 99 for the new time delay in minutes (01 being 1 minute and 99 being 99 minutes).

The green LED will then flash in standby.

8. To Delete all User Codes from Positions 01 to 50

Enter the Master Code and wait for the red LED to come on.

Enter the Master Code for a second time and wait for the green LED to come on.

Press keys 88, and the red LED will light for approximately 3 seconds.

The green LED will then flash in standby.

9. To change the duration of the Exit Button Override Mode

Enter the Master Code and wait for the red LED to come on.

Enter the Master Code for a second time and wait for the green LED to come on.

Press keys 99, and the green LED will light.

Press any two keys from 01 to 99 for the new time delay in seconds (01 being 1 second and 99 being 99 seconds).

The green LED will then flash in standby.

IP65 Rated

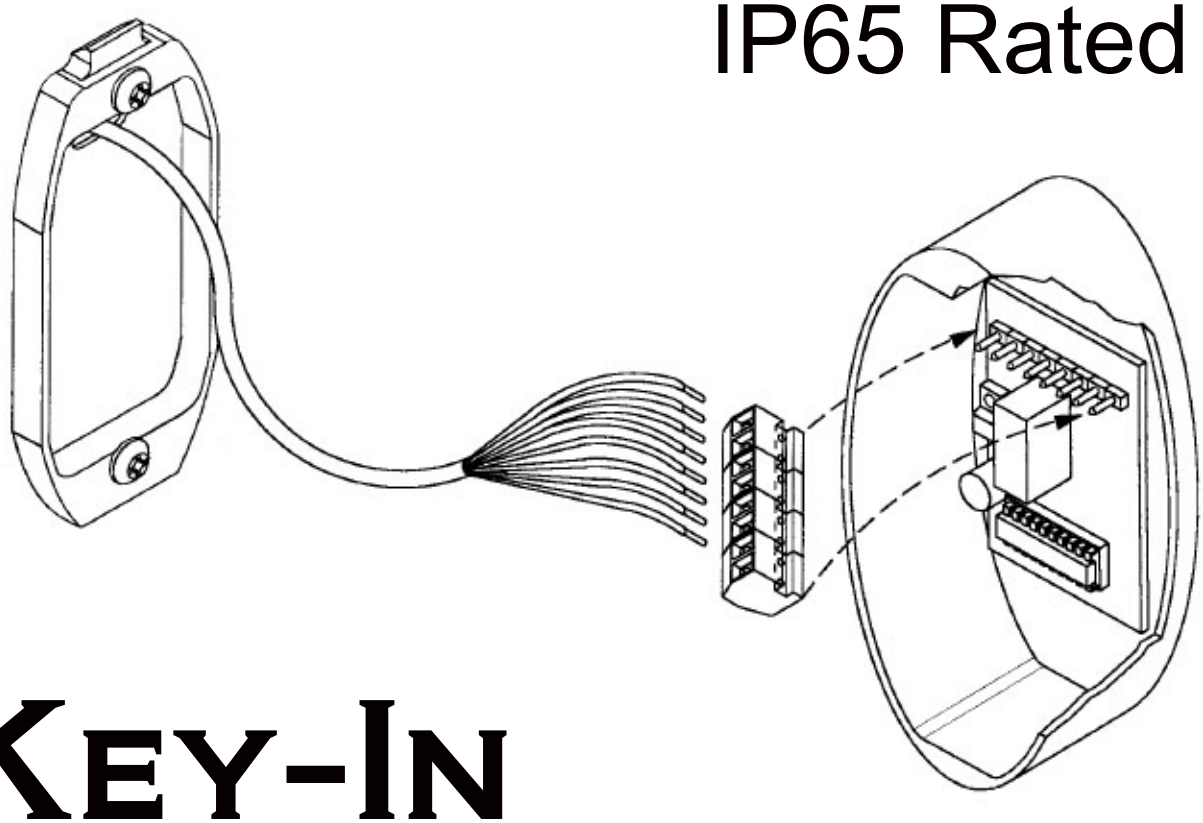

KEY-IN

sales@amsgroup.uk.com

T: (0) 1299 872900

ams

Bewdley Road, Stourport-on-Severn, DY13 8QR, United Kingdom